


DESIGN

ANCHOR INSTALLATION

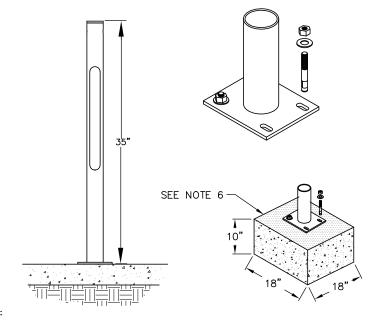

NOTES:

- SHOP DRAWINGS SHALL BE SUBMITTED TO THE ENGINEER A MINIMUM OF 3 WEEKS PRIOR TO INSTALLATION
 BIKE RACK SHALL BE HOT-DIPPED GALVANIZED WITH A BLACK FINISH TAMPER RESISTANT BOLTS ARE REQUIRED FOR ANCHOR INSTALLATION

- IF NOT SUPPLIED BY THE RACK MANUFACTURER, ANCHORING BOLTS (SPECIFICATIONS)
 SHALL BE SUBMITTED TO THE ENGINEER FOR APPROVAL PRIOR TO INSTALLATION
 (STAINLESS STEEL BOLT ARE REQUIRED)
 APPROPRIATE CLEAR ZONES SHALL BE CONFIRMED PRIOR TO INSTALLATION
 FOOTING INSTALLATION METHOD TO BE USED WHEN RACK IS NOT INSTALLED WITHIN A
- CONCRETE WALK AREA

708 - BIKE RACK (HITCH) 708 - BIKE RACK (HITCH).DWG 9/2016

H:\Cad_Comn\Details Updated\0 - 700 - TRAFFIC complete\708 - Bike Rack (Hitch)
| PLATE NAME:



1700 W 98TH ST. BLOOMINGTON MN 55431 PHONE (952) 563-8700

708 - Bike Rack (Hitch)

ENGINEERING DIVISION PUBLIC WORKS DEPARTMENT LAST REVISED: 9/16/2016 LAST REVISED BY: KBO